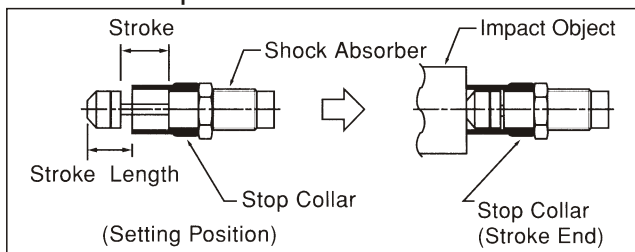
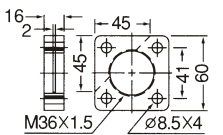
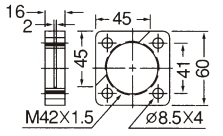
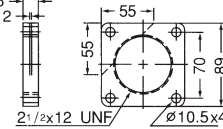




How to set stop collar



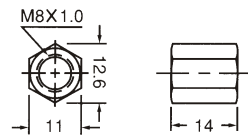
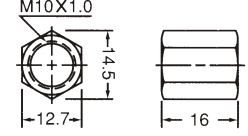
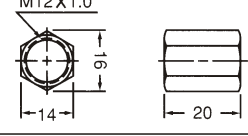
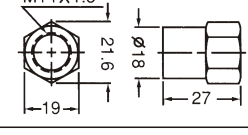
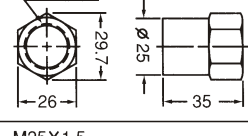
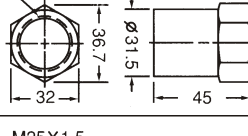
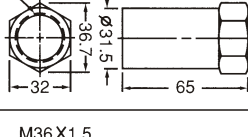

Flanges - F series

Model	Dimensions	Applicable for shock absorber model
F 36		MAC-3660 MAD-3650
F 42		MAD-4225 MAD-4250 MAD-4275
F 64		MAD-64050 MAD-64100 MAD-64150

SC series- Stop collars

Shock absorbers stop collars are available from M8 × 1.0 to M36 × 1.5 and suitable for shock absorbers with or without cap. They also can be used for adjusting and fixing position.

Optional accessories

Model	Dimensions	Applicable for shock absorber model
SC-08		MAC-0806
SC-10		MAC-1005 MAC-1007 MAC-1008
SC-12		MAC-1210
SC-14		MAC-1412 MAC-1415 MAC-1416 MAC-1420 MAD-1410 MAD-1415
SC-20		MAC-2015 MAC-2020 MAC-2030 MAC-2050 MACD-2030 MAD-2016 MAD-2025
SC-25		MAC-2525 MAC-2550 MAC-2580 MAD-2525 MAD-2530 MAD-2550 MAD-2580
SC-40		MAC-2540 MAD-2540
SC-50		MAC-3660 MAC-3625 MAC-3650